



METER

ZSC Bluetooth® Sensor Interface



ZSC QUICK START

Preparation

The ZSC can be used to display sensor measurement data or manage sensor preferences through the ZENTRA Utility Mobile app on a mobile device. The device must be capable of using Bluetooth® Low Energy (BLE).

Confirm that ZSC components are intact.

Read the full [ZSC User Manual](https://meter.ly/ZSC) at meter.ly/ZSC. All products have a 30-day satisfaction guarantee.

ZENTRA Utility Mobile

The latest version of the ZENTRA Utility Mobile app must be downloaded from the iOS® or Android® app store prior to connecting to a sensor and viewing sensor data.

1. Using the smartphone, open the mobile app store or scan the QR code to open the METER ZENTRA Apps website.
2. Download the ZENTRA Utility Mobile app.
3. Open ZENTRA Utility Mobile.
4. Use the In-App Tutorial to become familiar with the app screens and capabilities.




Measurement

1. Turn on the ZSC

Install the included AA batteries.


Press the button on the ZSC. The LED should begin blinking blue.

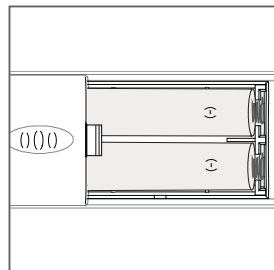

2. Open ZENTRA Utility

Open the ZENTRA Utility app.


Select the ZSC when it appears on the **Connect** screen.

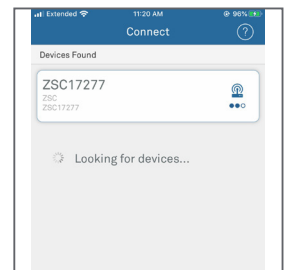

3. Plug In Sensor

Plug the sensor stereo connector into the ZSC stereo port.

If the sensor has stripped and tinned wires, use a pigtail-to-stereo adapter as described in the user manual.

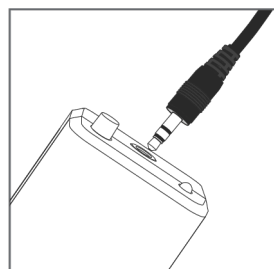

4. View Sensor Readings

Digital sensors should be automatically recognized and appear on the **ZENTRA Utility** screen.

NOTE: Analog sensors need to be selected from the dropdown list.

Swipe down to update the measurement as desired.

