



METER

ZL6

TABLE OF CONTENTS

1. Introduction.....	1
2. Operation	3
2.1 Installation	3
2.2 Interfacing with ZL6 Using a Computer	5
2.2.1 Configuration	5
2.2.2 Communication Test (ZL6 and ZL6 Pro)	9
2.2.3 Instantaneous Sensor Measurements Scan.....	10
2.2.4 Data Download	10
2.2.5 Data Deletion	11
2.3 Interfacing with ZL6 Using a Smartphone or Tablet	11
2.3.1 Connection.....	11
2.3.2 Configuration	13
2.3.3 Communication Test (ZL6 Cellular and ZL6 Pro)	15
2.3.4 Instantaneous Sensor Measurements Scan.....	16
3. System.....	17
3.1 Specifications.....	17
3.2 Hardware Components	20
3.2.1 Sensor Interface	21
3.2.2 Sensor Measurement Interval.....	22
3.2.3 Test Button	22
3.2.4 Status Lights	23
3.2.5 Batteries	23
3.2.6 GPS Receiver (ZL6 Select models)	24
3.2.7 Timekeeping	25

3.2.8 Data Storage	25
3.2.9 Zentra Cloud Communications (ZL6 and ZL6 Pro)	25
4. Wi-fi Communication	27
4.1 Configuring ZL6 for Wi-Fi Networks	27
4.2 Open Network Configuration.....	29
4.3 Secured Personal Network Configuration	29
4.4 Secured Enterprise Network Configuration	30
4.5 Hidden Wi-Fi Network Configuration	31
4.6 Incompatible Wi-Fi Networks	32
4.7 Communication Test	33
4.8 Using the ZL6 Indoors	34
4.9 Troubleshooting Wi-Fi Connections	34
5. ZENTRA Software.....	35
5.1 ZENTRA Utility Mobile	35
5.2 ZENTRA Utility	36
5.2.1 Button Toolbar	36
5.2.2 Data Logger Identification Area	37
5.2.3 Active Sensors and Measurements Area.....	37
5.2.4 Status Bar	37
5.2.5 Menu Bar.....	38
5.3 ZENTRA Cloud.....	47
6. Service.....	49
6.1 Maintenance.....	49
6.2 Troubleshooting.....	50
6.3 Customer Support.....	53
6.4 Terms and Conditions	53

APPENDIX A. Compliance Certifications54


 A.1 USA..... 54

 A.2 Canada 54

 A.3 European Union 55

 A.4 Japan..... 56

Index57

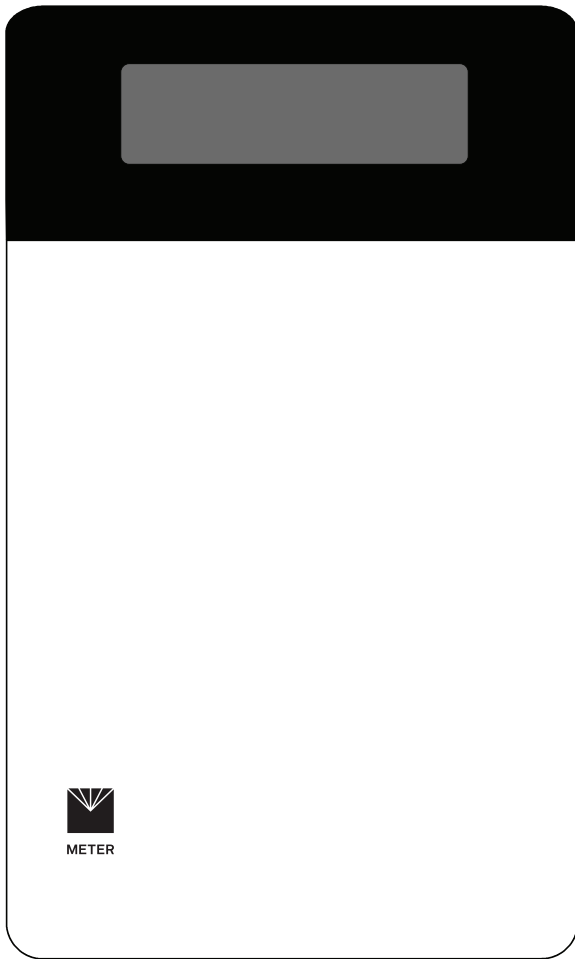

1. INTRODUCTION

Thank you for choosing the ZL6 data logger from METER Group. The ZL6 loggers are part of the ZENTRA System: a collection of data loggers, software, and compatible sensors to measure environmental parameters accurately and cost effectively. Please refer to metergroup.com/logger-compatibility for a list of supported sensors.

This manual covers the ZL6 Basic, the ZL6, and the ZL6 Pro with their corresponding communication options. Throughout this manual, all three loggers will be referred to as ZL6 unless otherwise noted. The primary differences between the loggers are in [Table 1](#).

Table 1 Logger feature differences

Feature	ZL6 Basic	ZL6	ZL6 Pro
Long-range telemetry hardware for automatic uploads to ZENTRA Cloud	None	3G or 4G cellular Wi-Fi communication	3G or 4G cellular
Hourly data uploads	None	Included	Included
15 minute data uploads	None	Sold separately	Included
At measurement intervals data upload	None	Wi-Fi communication only	None
GPS for position and timekeeping	None	Included	Included
Battery technology*	Alkaline	NiMH or alkaline	NiMH or alkaline
Battery charging	None	Integrated solar panel	Integrated solar panel
Measurement interval	60 min	5 min to 12 h	5 min to 12 h
Flash data storage	2 MB	8 MB	8 MB
Reference barometer	Sold separately	Included	Included
Sensor cable strain relief	Sold separately	Included	Included
ZENTRA Cloud subscription	Sold separately	Sold separately	3 years
Warranty	1 year	1 year	3 years

*Energizer® Ultimate Lithium™ are now compatible for use with all ZL6 using firmware version 2.17 or later.

INTRODUCTION

Verify all instrument components are included and appear in good condition:

- ZL6 series logger
- Device ZENTRA Cloud subscription sticker (inside the logger)
- Six batteries
 - ♦ Alkaline for ZL6 Basic
 - ♦ NiMH rechargeable for ZL6 and ZL6 Pro
- Micro-USB communications cable
- UV-stable plastic zip ties
- Spare parts kit (ZL6 Pro only)

2. OPERATION

This section explains the basic workflow of logger installation, logger configuration, and data download. Please read all instructions before operating the ZL6 to ensure it performs to its full potential. Consider testing the ZL6 and sensors in a lab or office prior to field installation to verify the correct operation of the system.

The ZL6 can serve as a data collection station for as many as six sensors. It is designed for plug-and-play setup with all METER sensors, including the ATMOS weather sensors, TEROS soil moisture sensors, HYDROS water sensors, PHYTOS leaf sensors, and ECH₂O soil moisture sensors. Please refer to the individual sensor manuals for sensor installation instructions.

NOTE: To use TEROS 31 and TEROS 32 sensors with the ZL6 Basic, a reference barometer sensor must be added to the logger. Contact [Customer Support](#).

2.1 INSTALLATION

Follow the steps listed in [Table 2](#) to set up the ZL6 and start collecting data.

NOTE: Never immerse the ZL6 in liquids or bury the ZL6. This and other misuse, improper protection, or improper installation may damage the ZL6 and void the warranty.

Table 2 Installation

Tools Needed	Microsoft® Windows® or Apple® Mac® computer for ZENTRA Utility Apple® iPhone® (iOS) or Google Android™ smartphone (Android) for ZENTRA Utility Mobile Mounting post (or similar)
Preparation	Install ZENTRA Utility To install ZENTRA Utility Mobile on a smartphone or tablet: • Open the app store. • Search for ZENTRA Utility. • Download the application. To install ZENTRA Utility on a computer: • Navigate to the ZL6 webpage (metergroup.com/zl6-support). • Click the appropriate ZENTRA Utility Installer link. • Click through the ZENTRA Utility Installer wizard. The installer automatically installs the necessary USB driver for the ZL6. Install Batteries Press the TEST button on the logger. The status lights will eventually settle to a green short, single blink every 5 s, signaling it is ready for use.

Table 2 Installation (continued)

Configuration	Configure the ZL6 Using ZENTRA Utility On the ZL6, push the TEST button on the logger to ensure the Bluetooth® module is activated. On the mobile device, open ZENTRA Utility. Select the ZL6 to connect. Select Configure and set the desired cellular data upload settings (for ZL6 and ZL6 Pro) and sensor measurement interval (Section 2.3.2). For Wi-Fi configuration see (Section 4.1). NOTE: Configuration using ZENTRA Utility for Mac® and Windows® is addressed in Section 2.2.1.
Field Installation	Select Location Choose the desired location based on relevant details including: representative field position for sensor installation, vegetation cover throughout the season, distance from power lines, minimal livestock interference, etc. For ZL6 and ZL6 Pro, orient the solar panel to give it the maximum amount of sunlight. In the northern hemisphere this will typically mean the data logger will face south; in the southern hemisphere this will typically mean the data logger will face north. NOTE: If the location is in an area where solar energy harvesting is minimal, alkaline batteries will power the logger longer than the NiMH batteries when not being recharged by the solar panel. The ZL6 does not charge alkaline batteries. Check Communication Quality Evaluate how surroundings may attenuate the cellular or Wi-Fi signals. Large metallic objects, power lines, and plant canopies may block communication signals. Use ZENTRA Utility to check the communication of the cellular signal (Section 2.2.2) or Wi-Fi signal (Section 4.7). If the signal is low or the communication test fails, move to an alternative location (sometimes moving only a few meters is sufficient). Fasten Logger to Mounting Post Use the loopholes on the back of the logger enclosure to mount the ZL6 to a post using zip ties or a similar fastener (such as hose clamps). Ensure the logger is installed in an upright position to reduce the possibility of water entering the ZL6 enclosure. NOTE: The ZL6 case is water resistant, not waterproof. In extremely wet environments or those with prolonged high humidity, a desiccant packet inside the logger enclosure can help buffer humidity and protect the electronics from excessive condensation. If considering placing the ZL6 in a waterproof compartment, ensure it is pressure-vented and protected from sources of humidity that will condense inside. Avoid installing the logger very close to perpetually wet soil or a source of standing water. Do not bury the ZL6 enclosure directly in the soil.

Table 2 Installation (continued)**Field Installation
(continued)****Install Sensors**

Install each sensor as directed in the sensor user manual.

Thread cables near the ground through conduit or plastic cladding to avoid damage.

Plug the sensor stereo plug connectors firmly into the ZL6 input ports.

Put each cable in the corresponding strain relief hook and use thumb screws to tighten the strain relief hook.

Perform instantaneous scan to ensure sensors are working properly ([Section 2.2.3](#)).

2.2 INTERFACING WITH ZL6 USING A COMPUTER

Download ZENTRA Utility from the ZL6 webpage (metergroup.com/zl6-support) before going to the field. Add ZENTRA Cloud user credentials to allow uploading data.

2.2.1 CONFIGURATION

The measurement interval and sensor types must be set before data will be correctly stored by the logger.

To configure the ZL6 in ZENTRA Utility, refer to the following steps:

1. Plug the micro-USB cable into the logger USB port and the computer USB port.
2. Open the ZENTRA Utility application ([Figure 1](#)).

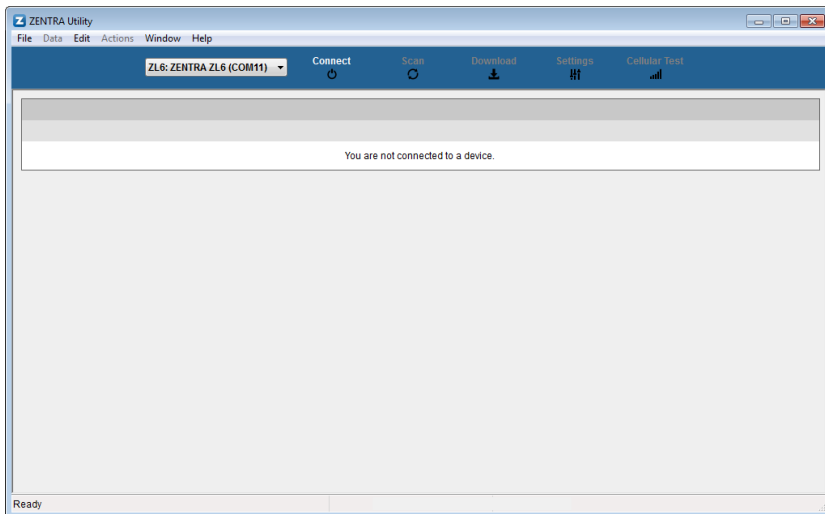


Figure 1 ZENTRA Utility initial screen with ZL6 in COM port dropdown

OPERATION

On the ZENTRA Utility main screen, the connected ZL6 should appear in the dropdown menu. If the logger designation does not appear in the dropdown, try a different port or cable.

3. Click the **Connect** button next to the **COM** port dropdown menu (Figure 2).

Once successfully connected, ZENTRA Utility displays the instantaneous sensor measurements from the ZL6 (Figure 2).

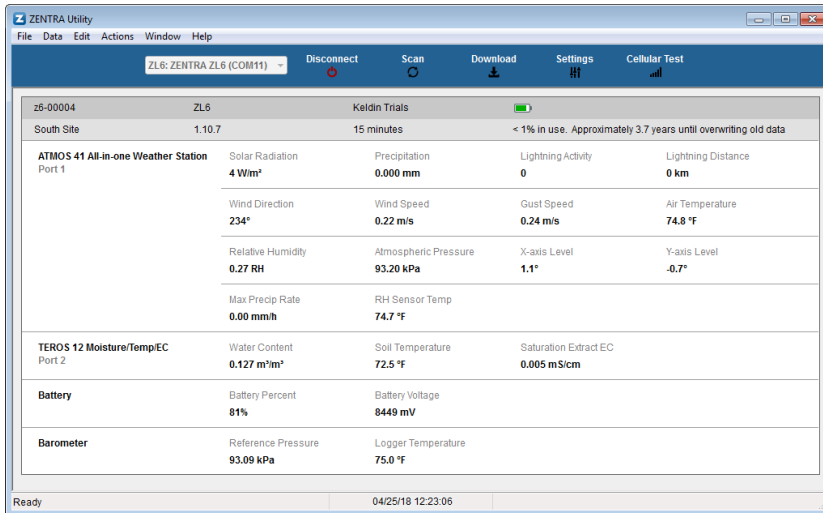


Figure 2 ZENTRA Utility showing a connected ZL6 and its instantaneous measurements

4. Click **Settings** in the Button toolbar.
The Manage Settings dialog will appear.
5. Navigate to the Device Information tab (Figure 3).

Manage Settings

Device Information | Sensor Configuration | Communication Settings | GPS Location

Device Name: z-logger*

Site Name:

Serial Number: EMCBasic

Firmware Version: 2.06.0

Device Type: ZL6 Basic

Automatically Upload to ZENTRA Cloud ☐

OK Cancel

Ready

Figure 3 Device Information tab

6. Enter a device name.

This value is prepopulated with the device serial number. Consider changing the name to the field or plot where the ZL6 is installed.

7. Navigate to the Sensor Configuration tab ([Figure 4](#)).

Manage Settings

Device Information | Sensor Configuration | Communication Settings | GPS Location

Measurement Interval: 15 minutes

Data Storage: 0.4% in use. - Approximately 3.7 years until overwriting old data

Port 1 | Port 2 | Port 3 | Port 4 | Port 5 | Port 6

Sensor Type: ATMOS 41 All-in-one Weather Station

Firmware Version: 0

OK Cancel

Ready

Figure 4 Sensor Configuration tab

8. Adjust the Measurement Interval to the desired time for storing sensor measurements. The ZL6 Basic has a fixed measurement interval of 60 min. [Section 3.2.2](#) provides more information on how the ZL6 makes measurements.
9. Confirm all sensors are plugged into the ZL6.
10. Ensure the correct sensor type is listed in each port tab ([Figure 5](#)).

If the sensor is not automatically recognized, pick the correct sensor setting from the Sensor Type dropdown menu.

NOTE: Check the cellular signal ([Section 2.2.2](#)) for ZL6 and ZL6 Pro loggers at the expected installation location before installing sensors.

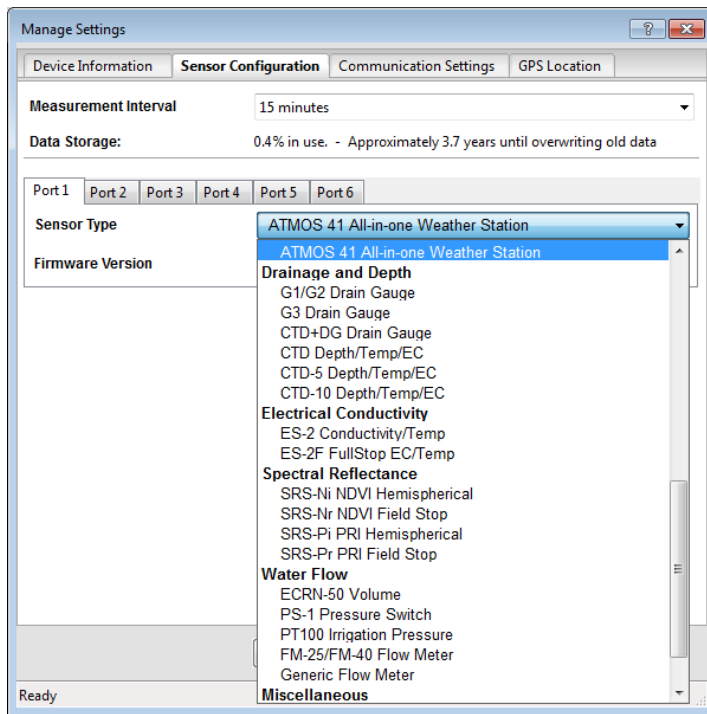


Figure 5 Select Sensor Type dropdown

ZL6 Basic logger configuration is complete at this point. ZL6 and ZL6 Pro logger configuration will need to continue to [step 11](#) through [step 13](#) to set up the desired data upload times.

11. Navigate to the Communication Settings tab ([Figure 6](#)).

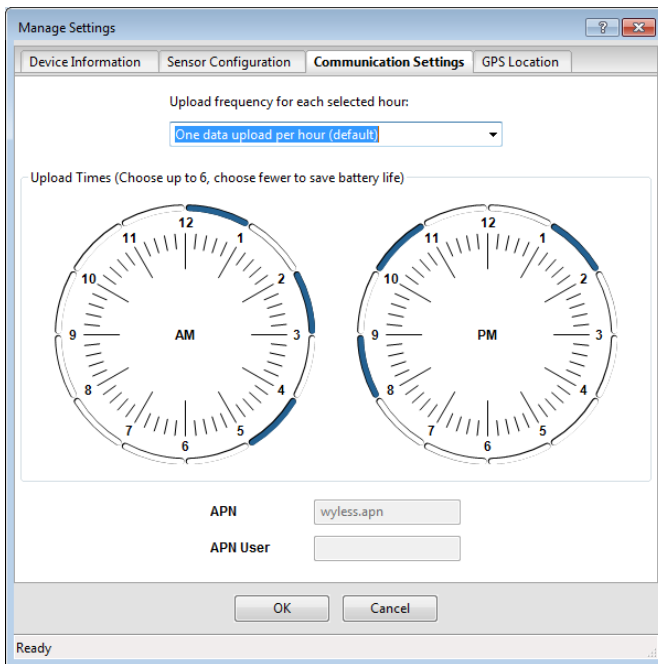


Figure 6 Communication Settings tab

12. Select the time segments in Upload Times by clicking the arc segments for the hour intervals.

The ZL6 will upload data during the selected intervals (see [Communication Settings Tab](#)).

13. Click **OK**.

2.2.2 COMMUNICATION TEST (ZL6 AND ZL6 PRO)

A successful communication test will confirm that the ZL6 can transmit data to ZENTRA Cloud servers as well as provide the quality of the connection. Even a poor connection status allows data to be successfully transferred. Prior to installing the sensors and the ZL6, check the quality of the connection at the location:

1. In ZENTRA Utility, click the **Test** button in the Button toolbar.

The Communication Test dialog will appear ([Figure 7](#)).

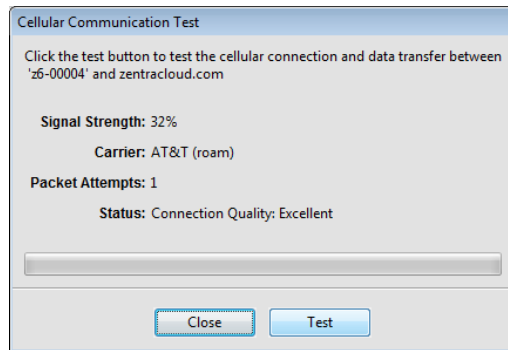


Figure 7 Cellular Communication Test dialog

2. Click **Test**.
3. If the logger fails the test, move to a new location and try again.
Sometimes, moving just a few meters will provide a successful connection.

NOTE: The ZL6 antenna is inside the enclosure. An antenna extension cable can also be used to elevate the antenna for increased signal strength. Contact [Customer Support](#) for more information.

4. Click **Close**.

2.2.3 INSTANTANEOUS SENSOR MEASUREMENTS SCAN

ZENTRA Utility will automatically scan the sensors attached to the ZL6 every 30 s and update the readings shown on the main screen ([Section 5.2.3](#)).

ZENTRA Utility can also take real-time sensor measurements on demand. This is a critical tool to ensure sensors are installed correctly, to test if a sensor is reading properly, or to evaluate how sensors react to environmental changes. The ZL6 does not store data that it measures with the scan function.

To force a new scan at any time, press the **Scan** button in the Button toolbar ([Section 5.2.1](#)). The sensor and measurement area will refresh.

2.2.4 DATA DOWNLOAD

While at the installation site, allow the ZL6 to collect data for one or two measurement intervals, and download the collected sensor data to ensure the monitoring setup is working correctly. Periodically return to the site to download the stored data, to check the logger operation, and to retrieve stored data.

Download saved sensor and status data with ZENTRA Utility using the following steps:

1. Connect the logger to a computer using the micro-USB cable.
2. Open ZENTRA Utility.
3. Choose the appropriate **COM** port from the dropdown list.

4. Click **Connect**.
5. Click **Download** on the Button toolbar. This will download the data stored since the last successful download.

Alternatively, go to the Data menu in the Menu bar and select either **Download New** (downloads the data stored since previous download) or **Download All** (downloads all the data currently stored in the ZL6).

6. Edit the File Name in the Save dialog. A suggestion will appear, based on the connected logger name and the time and date.
7. Select the location on the computer where the file will be saved.
8. Click **Save**.

ZENTRA Utility downloads sensor data and creates a Microsoft Excel® compatible file. The time-series sensor data saves to the Processed Records sheet of the workbook with metadata saved to the Metadata sheet. Metadata includes logger configuration settings, logger location, and sensor metadata, such as serial number and firmware version.

ZENTRA Utility will download data in the units chosen under Measurements in Manage Preferences dialog ([Section 5.2.5](#)).

2.2.5 DATA DELETION

It is not necessary to delete data on the ZL6. Once all of the memory has been used, the ZL6 will start overwriting the data starting with the oldest records.

Erasing stored data is done with ZENTRA Utility. Before erasing data, download and save data onto a computer.

CAUTION: This feature permanently erases all stored data on the ZL6. Data previously transmitted to ZENTRA Cloud are not erased.

To erase data, follow the steps below:

1. In ZENTRA Utility click on the Data menu on the Menu bar.
2. Select **Erase**. A dialog will appear.
3. Click **Erase Data** to remove data or click **Cancel** to return to the main screen.

2.3 INTERFACING WITH ZL6 USING A SMARTPHONE OR TABLET

Download ZENTRA Utility from the app store before going to the field. Add ZENTRA Cloud user credentials to allow uploading data.

2.3.1 CONNECTION

The ZL6 shuts off the Bluetooth radio between connection sessions to save battery power. It is necessary to enable Bluetooth before trying to connect.

1. On the ZL6 press the TEST button to enable Bluetooth advertising.

OPERATION

- On the mobile device launch ZENTRA Utility Mobile.
Look for the ZL6 in the Devices Found window (Figure 8).

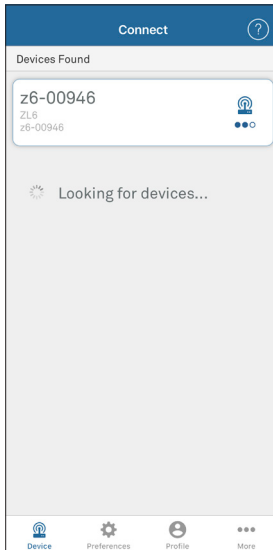


Figure 8 ZL6 in Devices Found window

- Select the ZL6 to establish a connection.

Once connected, ZENTRA Utility Mobile shows logger information and instantaneous sensor readings (Figure 9).

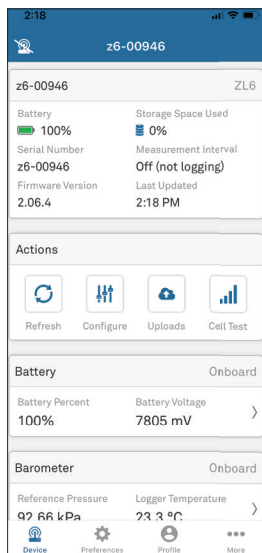


Figure 9 ZL6 information and current sensor readings

2.3.2 CONFIGURATION

The measurement interval and sensor types must be set before data will be correctly stored by the logger.

1. On the ZL6, press the **TEST** button to enable Bluetooth advertising.
2. On the mobile device, open ZENTRA Utility Mobile.
3. Select the ZL6.
4. Select **Configure** on the Actions panel ([Figure 10](#)).

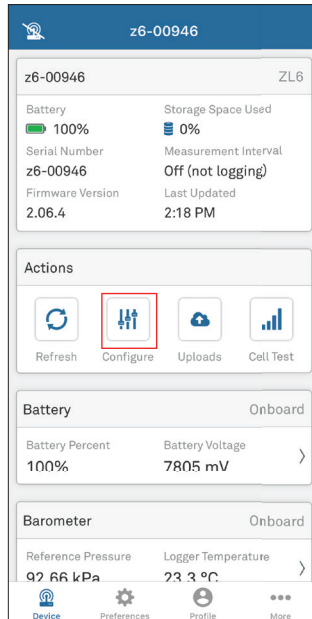


Figure 10 Select Configure

The Configure Device screen will appear ([Figure 11](#)).

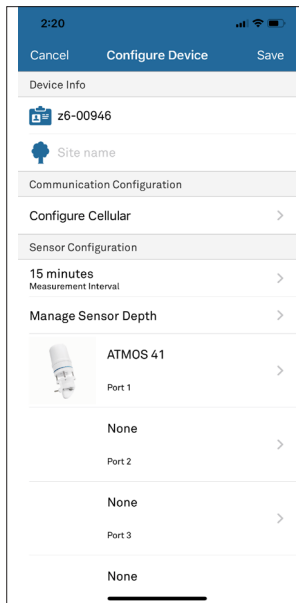


Figure 11 Configure Device screen

5. Enter a device name (Figure 11).

This value is prepopulated with the device serial number. Consider changing the name to the field or plot where the ZL6 is installed.

6. Enter a site name if desired.
7. In the Sensor Configuration panel verify the Measurement Interval is set to store data.
8. Verify each logger port is configured correctly for the installed sensor.
9. Click **Save** to send the updated parameters to the logger.

ZL6 Basic logger configuration is complete at this point. ZL6 and ZL6 Pro logger configuration will need to continue to [step 10](#) through [step 15](#) to set up the desired data upload times.

10. In the Communication Configuration panel, select **Configure Cellular**. See section ([Section 4.1](#)) for Wi-Fi communication configuration.
11. Select **Upload Frequency** to open the selection menu.
12. Choose upload frequency.
13. Select **Done**.
14. Select the time segments by clicking the arc segments for the hour intervals.
The ZL6 will upload data during the selected intervals (see [Communication Settings Tab](#)).
15. Click **OK**.

2.3.3 COMMUNICATION TEST (ZL6 CELLULAR AND ZL6 PRO)

A successful communication test will confirm that the ZL6 can transmit data to ZENTRA Cloud servers as well as provide the quality of the cellular connection. Even a poor connection status allows data to be successfully transferred. Prior to installing the sensors and the ZL6, check the cellular connection at the location:

1. Select the **Test** button on the Actions panel ([Figure 12](#)).

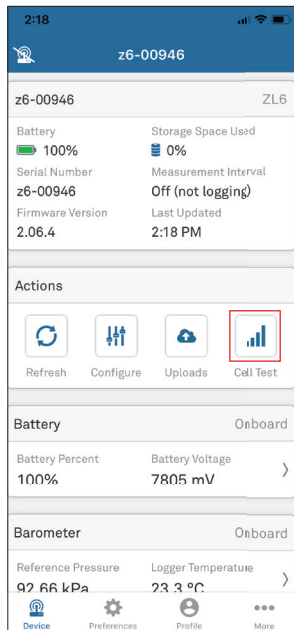


Figure 12 Select Test to begin Communication Test

2. Select **Start test**.

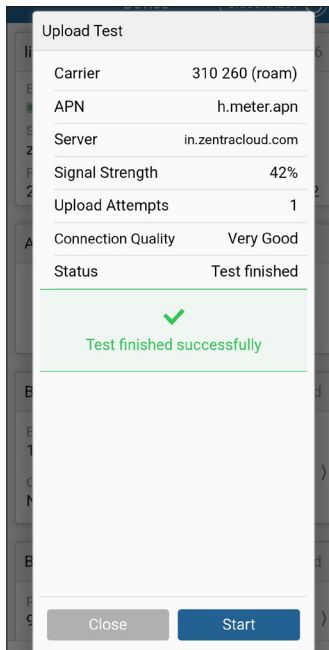


Figure 13 Select Start to begin the test

If the logger fails the test, move to a new location and try again. Sometimes, moving just a few meters will provide a successful connection.

NOTE: The ZL6 antenna is inside the enclosure. An external antenna on an extension cable can also be used to for increased signal strength. Contact [Customer Support](#) for more information.

3. Click **Close**.

2.3.4 INSTANTANEOUS SENSOR MEASUREMENTS SCAN

ZENTRA Utility Mobile will automatically scan the sensors attached to the ZL6 every 30 s and update the sensor readings.

ZENTRA Utility Mobile can also take real-time sensor measurements on demand. This is a critical tool to ensure sensors are installed correctly, to test if a sensor is reading properly, or to evaluate how sensors react to environmental changes. The ZL6 does not store data that it measures with the scan function.

To force a new scan at any time, swipe down on the main screen. The sensor measurement area will refresh.

3. SYSTEM

This section reviews the ZL6 data logger hardware features and configuration options. Use this information to help optimize each environmental monitoring setup.

3.1 SPECIFICATIONS

MEASUREMENT SPECIFICATIONS

Sensor Logging Interval

ZL6 Basic	60 min (average or accumulation of 60, 1-min sensor readings)
ZL6 and ZL6 Pro	5 min to 12 h (average or accumulation of 1-min sensor reading)

Logger Reporting Interval

ZL6 Basic	None
ZL6	Hourly with additional charges for more frequent reporting
ZL6 Pro	Hourly with the ability to enable more frequent reporting
ZL6 Wi-Fi communication	Upload after each measurement interval

Timekeeping

ZL6 Basic	Synchronize with ZENTRA Utility or ZENTRA Utility Mobile
ZL6 and ZL6 Pro	Synchronize automatically and on-demand; GPS, cellular or Wi-Fi communication, or ZENTRA Utility software

COMMUNICATION SPECIFICATIONS

Computer Communication

Standard USB cable, USB A to micro-USB B

Cellular Communication (ZL6 and ZL6 Pro)

4G LTE-M: USA, Canada, and select other countries

Contact [Customer Support](#) or a METER sales partner for more information.

Specifications	4G LTE-M and NB-IoT cellular
Coverage	Verizon®, AT&T®, and T-Mobile® in the USA. Select global partner carriers. Cellular and data hosting service provided by METER.

4G LTE Cat 1 Cellular Communication

Specifications	LTE Cat 1 cellular module with 3G and 2G fallback
Coverage	AT&T, and T-Mobile in the USA. 550+ global partner carriers Cellular and data hosting provided by METER

Wi-Fi Communication (ZL6)

Specifications	IEEE 802.11b/g/n 2.4 GHz
Supported Channels	1-11 in the USA and most regions of the world 12-13 when hardware detects ETSI/UKCA region
Supported Wi-Fi Networks	Open personal networks Secure personal networks using WPA/WPA2/WPA3 Enterprise networks using LEAP and PEAP security methods

Bluetooth Communication

Bluetooth 5.2- Bluetooth Low Energy protocol for communication with iOS and Android mobile devices.

GPS Communication (ZL6 and ZL6 Pro)

Type	Integrated 56-channel GPS/QZSS receiver
Update	Daily (automatic) and on-demand (manual)
Accuracy	±3 m, with good sky view

PHYSICAL SPECIFICATIONS

Dimensions

Length	14.9 cm (5.9 in)
Width	6.3 cm (2.5 in)
Height	25.0 cm (9.9 in)

Enclosure Material

Weather-, impact-, and UV-resistant polymer

Enclosure Rating

IP55

Enclosure Access

Hinged door with latches and eyelets for lock or zip tie

Sensor Input Ports

6 (supports METER analog, digital, or pulse sensors)

Sensor Port Type

3.5-mm stereo plug connector

Memory Type

Nonvolatile flash, full data retention with loss of power

Data Storage

ZL6 Basic	2 MB (20,000 to 30,000 records depending on configuration)
ZL6, ZL6 Pro	8 MB (40,000 to 80,000+ records depending on configuration)

Battery Capacity

ZL6 Basic	6 AA alkaline batteries
ZL6, ZL6 Pro	6 AA NiMH rechargeable or non-rechargeable batteries

Battery Life

Alkaline	3–12 months depending on configuration
NiMH	3+ years with unobstructed view of sun Charging through solar energy harvesting or USB

Operating Temperature Range	NiMH Batteries	Alkaline Batteries	Energizer® Ultimate Lithium™
Minimum for sensor measurements and full communications	−28 °C	−30 °C	−38 °C
Minimum for sensor measurements	−38 °C	−38 °C	−38 °C
Maximum	+50 °C	+55 °C	+60 °C

3.2 HARDWARE COMPONENTS

The ZL6 data logger is housed in a weather-resistant enclosure (IP55 rated) ([Figure 14](#)). In extremely wet environments or environments with prolonged high humidity, enclose a desiccant packet inside the logger. The ZL6 and ZL6 Pro have an integrated solar panel to recharge NiMH batteries.

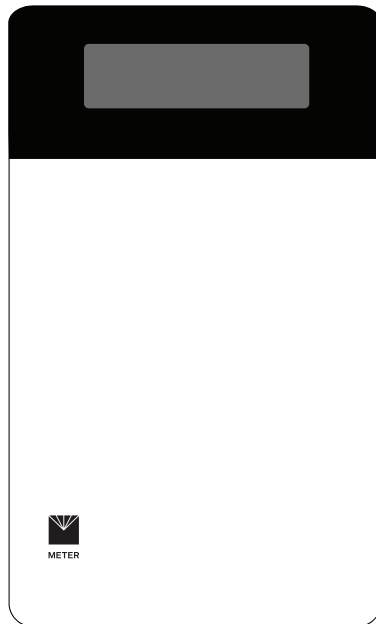


Figure 14 ZL6 data logger exterior

The ZL6 is purpose-built to collect data from environmental sensors sold by METER. The data logger has six ports for sensors and a micro-USB port for communicating with a computer ([Figure 15](#)). The data logger interior also contains a **TEST** button ([Section 3.2.3](#)) and two status lights, OK and ERROR ([Section 3.2.4](#)). The logger uses six batteries ([Section 3.2.5](#)).

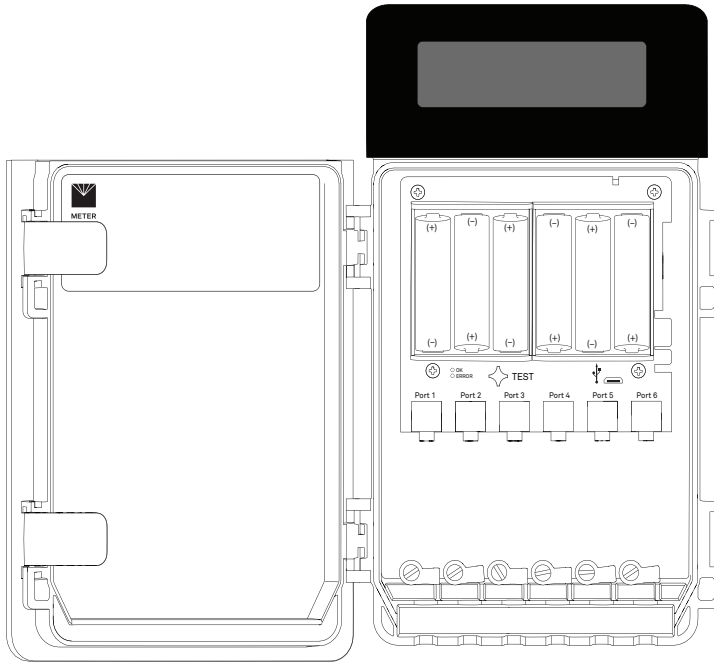


Figure 15 ZL6 data logger interior

3.2.1 SENSOR INTERFACE

The ZL6 will detect the presence of METER sensors when connected to the sensor ports. For METER digital sensors, the ZL6 will detect and autopopulate the Sensor Type dropdown on the Manage Settings dialog in ZENTRA Utility (see [Manage Settings Dialog](#)). For METER analog sensors, the ZL6 will show Unrecognized Sensor in the Sensor Type dropdown. Some sensors (such as pulse sensors) will not be detected by the ZL6. In these latter two cases the sensor will have to be manually selected from the dropdown menu.

NOTE: It is critical that the ZL6 is configured correctly for the attached sensors. Without correct configuration, the ZL6 will not record useful sensor information.

The ZL6 is able to detect when many of the METER sensors are unplugged or malfunctioning. The logger stores error codes in the place of normal sensor measurements in this event. ZENTRA software will display these errors to help troubleshoot problems with the sensors. The ZL6 cannot determine the difference between an intentionally uninstalled sensor and a malfunctioning sensor. Update the sensor configuration each time sensors are removed from or added to the ZL6.

3.2.2 SENSOR MEASUREMENT INTERVAL

The measurement interval controls how often the ZL6 records sensor data to internal nonvolatile data storage. The interval applies to all ports on the ZL6 (i.e., the ZL6 cannot store data for one sensor at a faster rate than another sensor). This setting is controlled in the Sensor Configuration tab of the Manage Settings dialog (see [Sensor Configuration Tab](#)).

The measurement interval works relative to the ZL6 internal real-time, 24-h clock. For example, a measurement interval of 60 min results in the ZL6 storing data every hour, on the hour (e.g., 12:00 am, 1:00 am, ..., 10:00 pm). The ZL6 and ZL6 Pro minimum measurement interval is 5 min and the maximum measurement interval is 12 h. For most applications, a measurement interval of 60 min is appropriate. The ZL6 Basic measurement interval is 60 min.

The ZL6 makes a measurement from each of the sensor ports in use every 60 s. When the ZL6 internal clock reaches the user-configured measurement interval, the ZL6 processes and stores the results from all the 60-s sensor readings taken since the last storage interval. For most sensors, the stored results are a simple average of the per-minute readings. For example, if the measurement interval for a TEROS 12 soil moisture sensor is 60 min, the ZL6 stores an average of the past 60 sensor readings. For a pulse-based sensor, such as a rain gauge, the ZL6 stores summed sensor readings. Some METER sensor user manuals contain more details of how the ZL6 processes sensor readings.

NOTE: Setting the ZL6 measurement interval to **Off (not logging)** turns off sensor measurement, data storage, and data uploads.

3.2.3 TEST BUTTON

Pressing the **TEST** button initiates the self-test sequence. The self-test can take 60 s or more if testing communications over the cellular network. The following actions are part of the self-test sequence:

- Reboot the ZL6.

This ensures internal software restarts and operates in the expected way. Both status lights stay on during the reboot. This reboot will not erase data or reset settings.

- Perform basic functionality testing on internal systems and evaluates the amount of charge in the battery.

Both the green and red lights blink together slowly while the logger performs tests.

- Autodetect the connected sensors ([Section 3.2.1](#)).
- Start the embedded GPS receiver to obtain a current time and location fix ([Section 3.2.6](#)).

This process takes as long as 15 min to complete.

- Establish an internet connection over the cellular network and attempt to communicate with ZENTRA Cloud.
- Enable the Bluetooth module to allow connection with ZENTRA Utility Mobile.

After completing the self-tests, the ZL6 will indicate success or failure by lighting either the green or red status light.

A solid green light (for approximately 20 s) indicates that internal tests passed and there is successful communication over the cellular network.

A solid red light indicates an error in the logger, which may indicate

- corrupt ZL6 logger firmware
- low batteries, or
- unsuccessful cellular communications (ZL6 and ZL6 Pro).

Use ZENTRA Utility to identify where the self-tests may have failed ([Section 5.1](#)) or consult troubleshooting to resolve logger errors ([Section 6.2](#)).

3.2.4 STATUS LIGHTS

Lights near the **TEST** button indicate the status of the ZL6. A green light is labeled OK and a red light is labeled **ERROR**. There are several possible status states:

- The green light gives a short, single blink every 5 s to indicate the ZL6 is configured to log sensor data.
- The green light blinks slowly (1 s on, then 1 s off), to indicate the logger is communicating to a computer.
- The green and red lights blink together during self-test procedures (after pressing the **TEST** button or pulling the battery tab).
- The solid green or the red light at the end of the self-test sequence indicates the results of the tests.
- The lights remain off if the logger measurement interval is set to Off (not logging).

3.2.5 BATTERIES

The ZL6 and ZL6 Pro are designed to use AA NiMH rechargeable batteries, providing years of battery life with solar recharging. The ZL6 is also compatible with AA alkaline and Energizer® Ultimate Lithium™ nonchargeable batteries. The logger automatically detects NiMH rechargeable batteries when installed. The ZL6 can't distinguish between Alkaline and Energizer Ultimate Lithium (defaulting to alkaline). Use ZENTRA Utility Mobile to configure the logger battery type when using Lithium batteries. The logger automatically adjusts the internal thresholds to represent 100% and 0% battery power for each battery type.

The ZL6 Basic is designed for AA alkaline batteries. This logger also supports Energizer Ultimate Lithium and NiMH battery settings. The logger battery type must be configured with ZENTRA Utility Mobile to correctly represent battery status when using these battery types. NiMH batteries in a ZL6 Basic are not recharged by the ZL6 Basic.

NOTE: Do not mix different battery types together. Do not mix new and old batteries together.

Use NiMH batteries if the ZL6 or ZL6 Pro will be installed outdoors, where it can harvest solar energy to charge NiMH batteries. Orient the ZL6 enclosure so the solar panel faces the maximum available sunlight. In the Northern Hemisphere, this typically means the data logger faces south; in the Southern Hemisphere, it faces north. There may be local obstructions that make another orientation more favorable. The logger will charge the batteries even in low-light conditions (e.g., winter or heavy overcast). In extended periods of low light, the incoming energy may be insufficient to power the logger. The batteries will buffer the logger's energy needs for several months and return to full capacity as incoming energy exceeds the energy required to operate the logger.

The ZL6 and ZL6 Pro will also harvest energy from the USB connection to a computer. Plugging the logger into a USB port for several hours will help restore NiMH batteries to full capacity.

Use alkaline or Energizer Ultimate Lithium batteries if the ZL6 or ZL6 Pro will be installed indoors or in a location where the harvested solar energy is not sufficient to keep the NiMH batteries charged. These types of batteries will power the logger for longer than NiMH batteries that are not being charged (6 to 7 months for typical configurations).

Energizer Ultimate Lithium batteries have higher capacity and much better low-temperature performance than other battery types. Consider using this battery type when prolonged air temperatures are below the minimum operating temperature specified for the other battery types.

The ZL6 and ZL6 Pro are designed to prioritize sensor measurements over both the GPS and cellular communications functionality. If the battery level reaches a critical threshold (showing 0% in software), the logger will continue to make sensor measurements until the battery charge is too low to provide excitation power to the sensors. When new batteries are installed or recharged, the GPS receiver and cellular communication functionality will automatically resume operation. The logger also monitors the temperature inside the enclosure to prevent attempts to communicate when the battery temperature is too cold to support the power required to upload data.

Logged data are stored in nonvolatile flash memory and will not be lost if power fails. However, power must be restored to the logger to download data.

3.2.6 GPS RECEIVER (ZL6 SELECT MODELS)

The ZL6 logger has a built-in GPS receiver that provides the latitude, longitude, and altitude of the logger. It is designed to provide time fix and location metadata for the environmental monitoring location. The ZL6 does not record the location of each individual sensor reading and is not optimized for applications such as geotagging a moving sensor platform.

The ZL6 enables the GPS receiver once per day. If the logger determines its location has not changed, it turns off the GPS receiver to save power. If the ZL6 detects a change, it keeps the GPS receiver powered for as long as 15 min to improve the accuracy of the location fix. Pressing the **TEST** button on the ZL6 triggers the logger to evaluate changes in location ([Section 3.2.3](#)).

3.2.7 TIMEKEEPING

The ZL6 keeps track of time using Universal Time Coordinated (UTC) seconds. All ZL6 models can synchronize time using ZENTRA Utility and ZENTRA Utility Mobile. Additionally, the ZL6 and ZL6 Pro synchronize time using the GPS receiver or the cellular network. The ZL6 prioritizes using GPS time since this will be the most accurate; however, the logger will fall back to the other sources of time when the ZL6 does not have a good GPS time fix.

NOTE: The ZL6 Basic requires a time sync to accurately save a time and date stamp with each sensor measurement record. This time sync happens when the logger connects to ZENTRA Utility or ZENTRA Utility Mobile. The time must be reset any time the logger loses power (when batteries are removed or replaced).

Data collected by the ZL6 uses the UTC time for the timestamp on each saved sensor record. ZENTRA Utility and ZENTRA Cloud display these data using local time based on where the logger is installed.

3.2.8 DATA STORAGE

The ZL6 only stores data for sensor ports that are configured for sensors ([Section 3.2.1](#)).

The ZL6 Basic stores 2 MB of data and the ZL6 and the ZL6 Pro store 8 MB of data. When the logger has filled its memory, it begins overwriting the oldest data in the memory. Data storage capacity varies between approximately 6 months to several decades depending on the logger, connected sensors, and set measurement interval. ZENTRA Utility software displays how many days of data the ZL6 can hold based on the current measurement interval ([Section 3.2.2](#)), sensor configuration, and previously stored data.

The ZL6 data memory is nonvolatile flash. Removing the batteries or rebooting the logger ([Section 3.2.3](#)) will not erase stored sensor measurement data.

The ZL6 stores encoded data for each sensor to make data storage and transmitting convenient. ZENTRA software automatically decodes the sensor data to display them correctly.

3.2.9 ZENTRA CLOUD COMMUNICATIONS (ZL6 AND ZL6 PRO)

The ZL6 has built-in communication hardware for reporting sensor measurement data to ZENTRA Cloud. This allows for near real-time monitoring of the environment at the measurement site.

The ZL6 powers the communication hardware only long enough to upload the data collected since the last time the logger successfully reported. During these upload times the ZL6 transfers data to ZENTRA Cloud, retrieves any pending settings changes, and occasionally performs operating system update to the logger.

For ZL6 units with cellular hardware, upload session frequency and timing can be changed in ZENTRA Utility ([Section 5.2](#)) or ZENTRA Cloud ([Section 5.3](#)). The default setting is for the ZL6 to upload data once per hour at a random time within each hour of the day at optimal hours. Less frequent uploads conserve battery power.

SYSTEM

Contact [Customer Support](#) if more frequent uploads are needed.

The ZL6 is available with several versions of cellular communication modules. Please contact [Customer Support](#) or a METER sales partner for more information on the configuration that is best for the location where you plan to deploy the instrument. For ZL6 units with Wi-Fi hardware, the logger will upload data within several minutes of storing the data. The frequency and timing of these uploads are not adjustable.

4. WI-FI COMMUNICATION

This section reviews the ZL6 Wi-Fi communications and configurations.

4.1 CONFIGURING ZL6 FOR WI-FI NETWORKS

A ZL6 logger using Wi-Fi for communications with ZENTRA Cloud operates much the same as the cellular-enabled version of the hardware as documented throughout this manual. The key difference is a ZL6 with Wi-Fi hardware requires the relevant settings to enable a connection to a Wi-Fi network. This is done using ZENTRA Utility Mobile. Once connected to a Wi-Fi network, the logger operates similar to the cellular version.

Use ZENTRA Utility Mobile to configure the ZL6 for a Wi-Fi network. The process starts the same for all supported Wi-Fi network types.

Press the **TEST** button on the logger to enable Bluetooth communications. Choose the ZL6 from the Connect screen in the app. ZENTRA Utility will connect to the ZL6 and retrieve the current configuration and status.

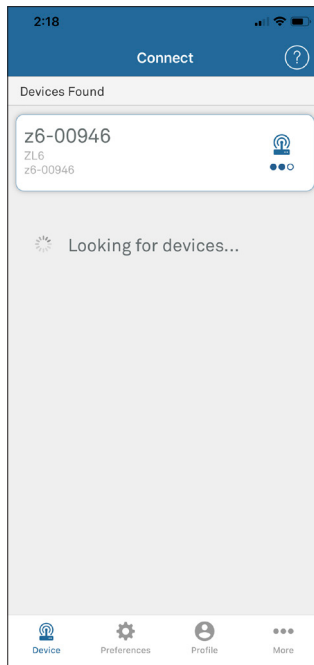


Figure 16 ZL6 Wi-Fi connection process

Tap **Configure** on the main screen. Then tap **Configure Wi-Fi Network** to start the connection process. ZENTRA Utility asks the ZL6 for a list of Wi-Fi networks within range of the logger.

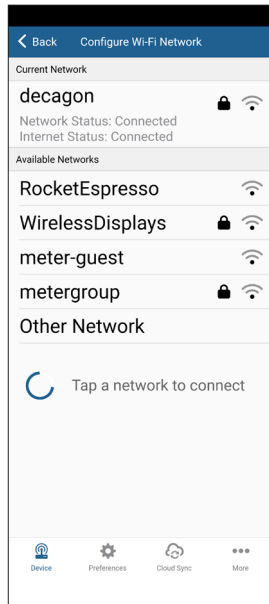


Figure 17 Wi-Fi network list

ZENTRA Utility lists up to 12 of the Wi-Fi networks reported by the ZL6. Secure networks that require a passphrase are shown with a lock icon. Tap the name of the network to select the network ZL6 should be used to communicate with ZENTRA Cloud.

There are several reasons a desired Wi-Fi network isn't shown on the list. The signal strength may not be strong enough because the ZL6 is not close enough to the access point. The ZL6 is compatible with IEEE 802. 11b/g/n 2.4 GHz Wi-Fi networks. The ZL6 cannot join a network using only the 5 GHz bands. The network may not be broadcasting the name. See section 4.5 for how to configure the ZL6 for a hidden Wi-Fi network. The Wi-Fi hardware inside the ZL6 auto-detects which regulatory region where it is operating. For many locations in the world, including the USA, the module disables Wi-Fi channels 12 & 13. Check the Wi-Fi access point configuration to verify it is not using channels 12 & 13 (or set to auto-select the channel when channels 12 & 13 are an option). The ZL6 only supports channels 12 & 13 when deployed in the ETSI/UKCA region.

4.2 OPEN NETWORK CONFIGURATION

The ZL6 is compatible with personal Wi-Fi networks that are not secured. This type of network doesn't require a passphrase.

NOTE: Some open networks employ a captive portal. The ZL6 is not compatible with this type of network.

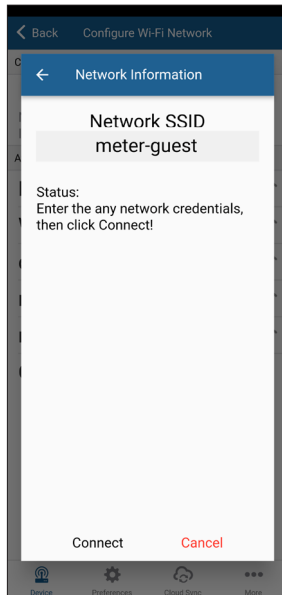


Figure 18 Configuration of open network

Tap **Join** to send the network settings to ZL6. The logger proceeds to connect to this Wi-Fi network and communicate with ZENTRA Cloud. ZENTRA Utility Mobile will report any errors.

4.3 SECURED PERSONAL NETWORK CONFIGURATION

The ZL6 is compatible with personal secured Wi-Fi networks. These are the most common kind of networks used in homes and small businesses. This type of network requires a passphrase that is at least 8 characters long.

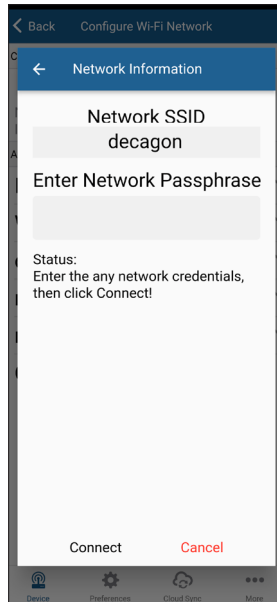


Figure 19 Configuration of personal secured network

Enter the passphrase and then Tap **Join** to send the network settings to ZL6. The logger proceeds to connect to this Wi-Fi network and communicate with ZENTRA Cloud. ZENTRA Utility Mobile will report any errors.

4.4 SECURED ENTERPRISE NETWORK CONFIGURATION

The ZL6 is compatible with some Wi-Fi networks employing enterprise security. These types of networks are used in larger businesses and universities. Typically, enterprise networks require IT professionals to deploy and support. The ZL6 is compatible with enterprise networks that are secured by a username and password using LEAP and PEAP methods. See [Section 4.1](#) for networks that require authentication with certificates.

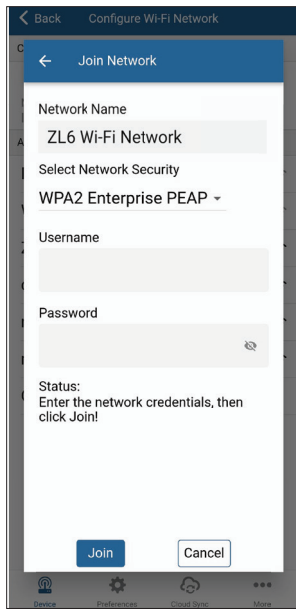


Figure 20 Configuration of an enterprise network

Enter the username, password, and security type and then Tap **Join** to send the network settings to ZL6. The logger proceeds to connect to this Wi-Fi network and communicate with ZENTRA Cloud. ZENTRA Utility Mobile will report any errors.

4.5 HIDDEN WI-FI NETWORK CONFIGURATION

Some Wi-Fi networks are configured not to broadcast their network name. These are known as hidden networks. These networks could be secured with personal or enterprise authentication methods. The ZL6 is compatible with hidden personal networks and is also compatible with hidden enterprise networks described in ([Section 4.4](#)) above.

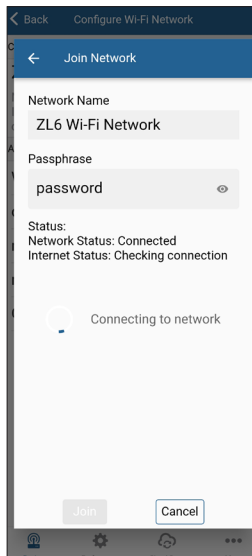


Figure 21 Configuration of hidden personal network

Connecting to a hidden Wi-Fi network requires you to enter the network name and security credentials. Consult your IT professional if you are unsure of the settings to use with the hidden network. Tap **Join** to send the network settings to ZL6. The logger proceeds to connect to this Wi-Fi network and communicate with ZENTRA Cloud. ZENTRA Utility Mobile will report any errors.

4.6 INCOMPATIBLE WI-FI NETWORKS

The ZL6 is not compatible with the following types of Wi-Fi networks. Consult an IT specialist for assistance if the network intended to be used with the ZL6 is one of the following incompatible networks.

The ZL6 is not compatible with Wi-Fi networks that employ captive portal technology. Captive portals are commonly used with open Wi-Fi networks to present a network login page or to require a compliance agreement with an acceptable use policy before allowing network access. The ZL6 is unable to interact with these requirements. It is not possible for ZENTRA Utility mobile to identify networks using a captive portal. During the configuration process, ZENTRA Utility Mobile will likely alert that the ZL6 does not have internet access even if it successfully connected to the Wi-Fi network.

Suggested work around for networks using a captive portal: provide the network administrator with the MAC address for the ZL6 so it can be added to the network whitelist.

The ZL6 is not compatible with enterprise Wi-Fi networks that require security certificates to be loaded onto the clients using the network. These networks typically use certificates instead of usernames and passwords to enable network access. Networks secured with

the EAP-TLS method is an example of an incompatible network. ZENTRA Utility Mobile and the ZL6 do not currently support transferring security certificates to the Wi-Fi module embedded in the ZL6.

Suggested work around for networks using security certificates: work with your IT professional to deploy a dedicated Wi-Fi network for the ZL6 hardware that uses supported network security.

The ZL6 is not compatible with networks that require the hardware to use statically assigned IP address configuration. It is not currently possible to configure the ZL6 to use a static IP address with ZENTRA Utility Mobile. The ZL6 only interacts with ZENTRA Cloud over the internet so a dynamically allocated IP address is sufficient.

Suggested work around for networks requiring static IP address: provide the network administrator with the MAC address for the ZL6 so it can be given a fixed IP address via DHCP.

4.7 COMMUNICATION TEST

A successful communication test will confirm that the ZL6 can transmit data to ZENTRA Cloud servers as well as provide the quality of the Wi-Fi connection. Even a poor connection status allows data to be successfully transferred. Prior to installing the sensors and the ZL6, check the Wi-Fi connection quality at the location:

Tap the **TEST** button on the Actions panel and select **Start Test**.

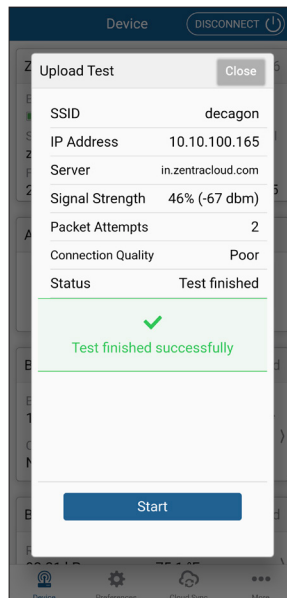


Figure 22 Upload test showing Wi-Fi information

Alternatively the Wi-Fi network access point may also be moved closer to the logger to ensure good communications.

4.8 USING THE ZL6 INDOORS

The ZL6 is designed to withstand the weather of outdoor environments. It also works well in a laboratory environment indoors. Deploying Wi-Fi enabled ZL6 loggers indoors is common.

The solar energy harvesting feature of the ZL6 may not work well enough indoors to keep the rechargeable NiMH batteries charged. Consider using Alkaline or Energizer® Ultimate Lithium™ batteries for indoor applications. Contact [Customer Support](#) for additional power options.

4.9 TROUBLESHOOTING WI-FI CONNECTIONS

For troubleshooting the ZL6 Wi-Fi connection see [Table 3 \(Section 6.2\)](#). Contact [Customer Support](#) if further assistance is needed.

5. ZENTRA SOFTWARE

The ZL6 is designed to work with ZENTRA Utility Mobile, ZENTRA Utility, and ZENTRA Cloud. ZENTRA Utility Mobile communicates with the ZL6 using Bluetooth to configure the ZL6 and upload data to ZENTRA Cloud ([Section 5.1](#)). ZENTRA Utility communicates with the ZL6 via USB to configure the ZL6, download data to a computer, and upload these data to ZENTRA Cloud ([Section 5.2](#)). ZENTRA Cloud is a web-based application to remotely view and share environmental data, download spreadsheets, and configure the ZL6 ([Section 5.3](#)).

5.1 ZENTRA UTILITY MOBILE

ZENTRA Utility Mobile for iOS or Android Mobile Devices is a user-friendly interface for configuring and downloading data from the ZL6 logger that can be used on Apple (iPhone iOS) or Google (Android) smartphones or tablets. With ZENTRA Utility, the user can connect to ZL6 loggers directly to

- configure operation logger parameters,
- test ZL6 and ZL6 Pro cellular and Wi-Fi communications
- troubleshoot real-time sensor measurements (scan sensors).

ZENTRA Utility Mobile launches with an in-app tutorial to illustrate the important features of the app. Select **More > In-App Tutorial** to review this tutorial at any time. Use the Connect screen to select the ZL6 and use the ZENTRA Utility Mobile main screen to configure the logger and check sensor measurements.

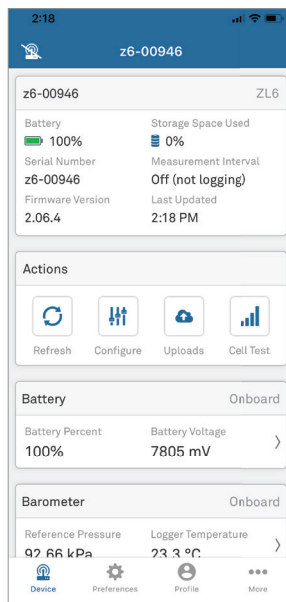


Figure 23 ZENTRA Utility Mobile main screen

5.2 ZENTRA UTILITY

ZENTRA Utility for Windows or Mac Computers is a user-friendly interface for configuring and downloading data from the ZL6 logger that can be used on any MacOS (10.9 and newer) or Microsoft Windows (7 and newer) laptop, netbook, or desktop computer. With ZENTRA Utility, the user can connect to ZL6 loggers directly to

- set all logger configuration parameters,
- test ZL6 and ZL6 Pro cellular communications,
- make real-time sensor measurements (scan sensors),
- create Excel files with sensor data, and
- upload data to ZENTRA Cloud.

The ZENTRA Utility main screen should appear upon launch (Figure 24). Use the Menu bar and Button toolbar to interact with the ZL6.

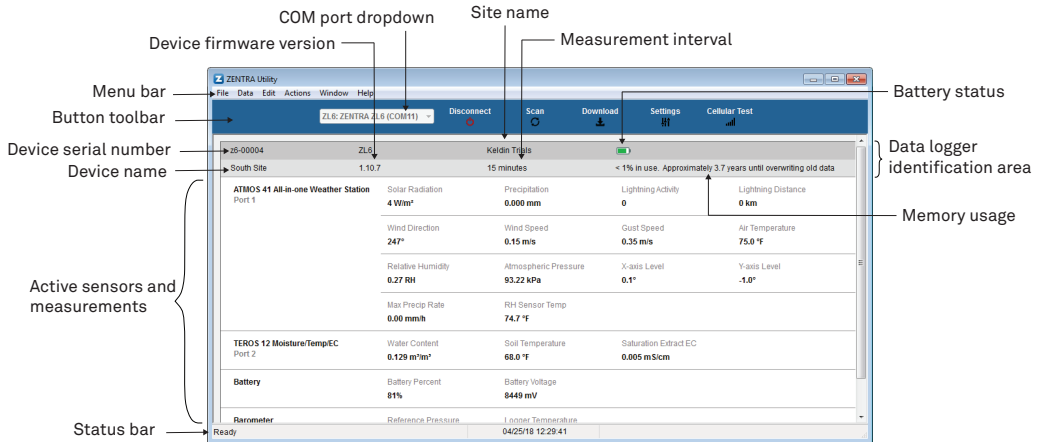


Figure 24 ZENTRA Utility main screen

5.2.1 BUTTON TOOLBAR

The Button toolbar provides shortcuts for the most frequent actions in using and configuring the ZL6 (Figure 25):

- **COM port dropdown menu:** Lists USB devices connected to the computer.
- **Connect/Disconnect:** Click the **Connect** button to attempt to connect to the device currently selected in the **COM** port dropdown menu. Click the **Disconnect** button to disconnect from the currently connected logger.
- **Scan:** Queries the connected ZL6 for the current sensor readings and updates the active sensors and measurements area.

- **Download:** Downloads all data that has been collected on the ZL6 since the last time a download from the selected logger.
- **Settings:** Opens the Manage Settings dialog (see [Manage Settings Dialog](#)).
- **Test:** Opens the Cellular Communication Test dialog ([Section 2.2.2](#)).




Figure 25 Button toolbar

5.2.2 DATA LOGGER IDENTIFICATION AREA

The Data Logger Identification area shows information for the connected ZL6. Hover over each item for its label. Any customizable fields can be adjusted through the Manage Settings dialog (see [Manage Settings Dialog](#)).

- **Serial Number:** The factory-set unique serial number for each ZL6.
- **Device Type:** Model ZL6 or ZL6 Basic.
- **Site Name:** Customizable field to describe the ZL6 location.
- **Remaining Battery Life:** Icon that shows the battery charge remaining on the device.
- **Cellular Strength:** Icon that shows the strength of the cellular signal. This appears only after the cellular communication test is completed ([Section 2.2.2](#)).
- **Device Name:** Customizable field to describe the ZL6 device.
- **Firmware Version:** Version of firmware on the ZL6.
- **Measurement Interval:** Customizable field that describes the frequency at which the ZL6 will be recording measurements ([Section 3.2.2](#)).
- **Time until Overwriting Data:** Indicator of how much data are stored on the ZL6 and how long it will be able to record more measurements before overwriting older data.

5.2.3 ACTIVE SENSORS AND MEASUREMENTS AREA

All sensors plugged into the ZL6 are listed in this area and each sensor in this section is delimited by a horizontal bar ([Figure 24](#)). The left side of the section will have the sensor name and port number. The two on-board sensors (Battery and Barometer) will not show a port number. The right side of the section will list all measurements from the sensor, with a descriptor of the value. The measurements will use the units selected in the Manage Preferences Dialog ([Section 5.2.5](#)).

5.2.4 STATUS BAR

The Status bar in the bottom border of the screen will include what is happening in the software. It also shows the logger date and time.

5.2.5 MENU BAR

ZENTRA Utility Menu bar has six menus to access the program features: File, Data, Edit, Actions, Window, and Help.

FILE MENU

The File menu includes two options:

- **Disconnect:** Disconnect from a logger and end communications.
- **Quit:** Closes ZENTRA Utility.

DATA MENU

The Data menu has three options:

- **Download Data Since Last Download:** Download the data stored since the last successful download.
- **Download All Data:** Download all the data currently stored in the ZL6.
- **Erase:** Deletes all stored data.

[Section 2.2.4](#) provides instructions for downloading data from the ZL6 logger.

The data downloaded by ZENTRA Utility will be calibrated correctly for each sensor type, except for soil moisture sensors. ZENTRA Utility uses a default calibration for soil moisture sensors that is appropriate for most mineral soils, but a custom calibration may be needed for the particular soil type.

RAW VWC

If a different soil moisture sensor calibration is necessary, change the Measurement Units to Raw VWC in the Manage Preferences tab. Raw VWC values will be downloaded in the Processed Data worksheet for use as inputs to custom calibration equations. See each specific sensor manual for alternative calibrations that can be applied to the raw data.

EDIT MENU

The Edit Menu allows the user to edit preferences in the Manage Preferences dialog. These preference configurations will only be saved to the computer, not as measuring preferences in the ZL6 memory. It has four tabs for navigation:

- Measurements Tab ([Figure 26](#)):
 - ♦ **Measurement Units:** Set preferences for measurement units by using the dropdown menus. Click **OK** to apply the changes.

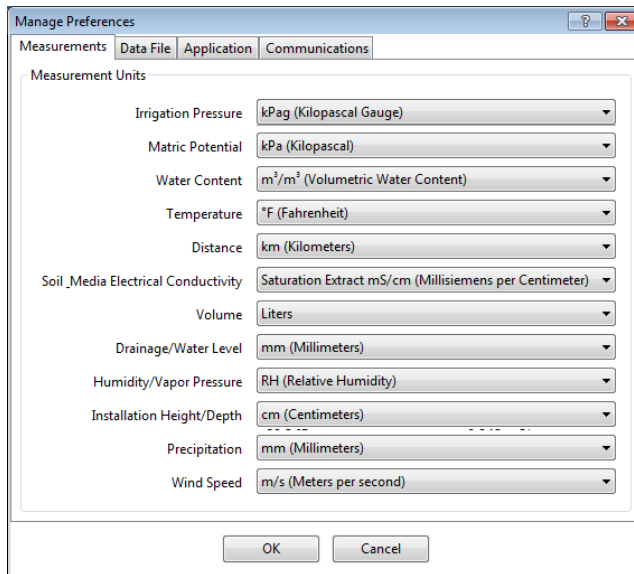


Figure 26 Measurements tab

• Data File Tab (Figure 27):

- ♦ **Date and Time Display in ZENTRA Utility:** Change the format of date and time values by selecting an option from the dropdown menus. This controls how date and time are shown in ZENTRA Utility display and in the downloaded files.

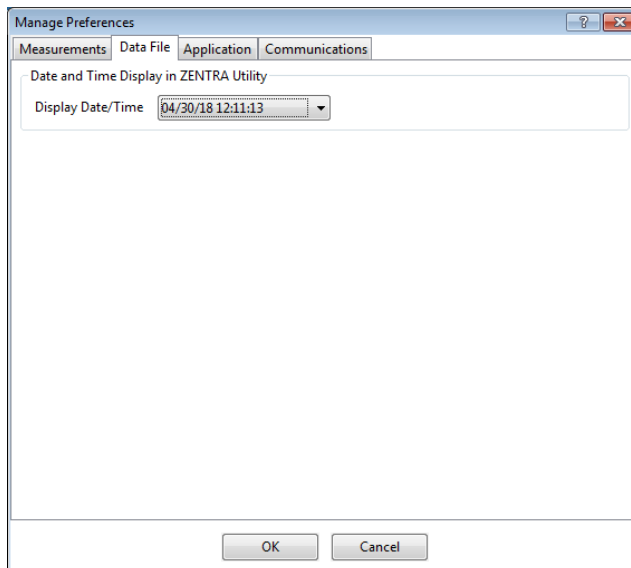


Figure 27 Data File tab

- Application Tab (Figure 28):

- ♦ **Automatic Internet Version Check:** Select the checkbox to automatically be notified when a new ZENTRA Utility version becomes available. Updates can be searched for manually at any time in the Help menu.
- ♦ **Automatic Clock Synchronization:** Select the checkbox to keep the device clock synchronized with the connected computer clock. The date and time can also be updated by using the Actions menu.

If the computer will not always have the correct time zone setting for the logger sites, deselecting this option will not override the setting in the logger.

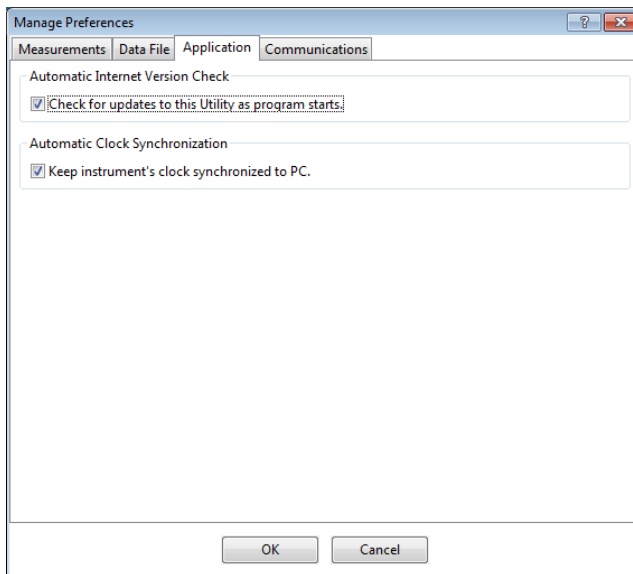


Figure 28 Application tab

- Communications Tab (Figure 29):

- ♦ **Device Commands Retries:** Modifies the number of times ZENTRA Utility sends commands to a logger.
- ♦ **Extra Response Time:** Modifies the length of time ZENTRA Utility waits for a response from the logger.
- ♦ **Communication Ports List:** Enable this option if the USB device does not appear in the Connect dropdown list.

NOTE: Enabling this option may also find COM ports that are unavailable for use by ZENTRA Utility.

- ♦ **Power Noise Filter:** Set the Power Frequency to eliminate electrical noise that comes from an AC power distribution system.

In North America and most of Asia, the frequency of the power cycle is 60 Hz (the default value); in most of Europe it is 50 Hz. This feature only needs to be set once, and the program will automatically update each connected device filter.

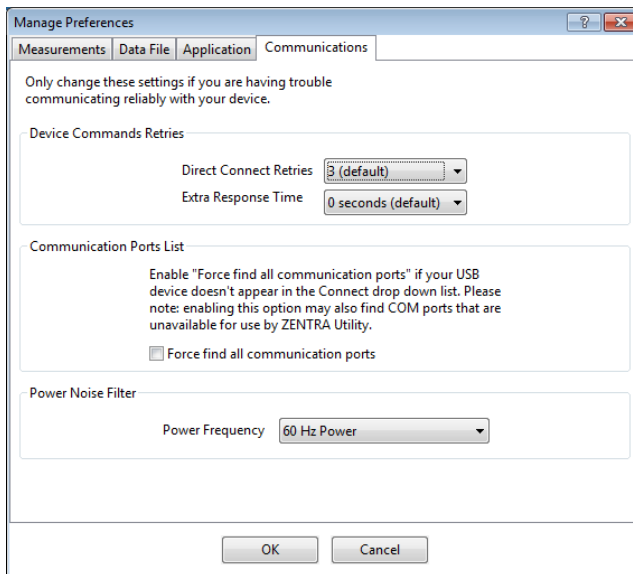


Figure 29 Communications tab

ACTIONS MENU

The Actions menu is the primary menu for configuring and testing the ZL6 series logger.

- **Select Sensors:** Displays the Sensor Configuration tab in the Manage Settings dialog (see [Manage Settings Dialog](#)).
- **Set Device Time:** Instructs ZENTRA Utility to set the ZL6 time and date according to the time and date on the computer.
- **Digital Sensor Terminal:** Sends commands through the ZL6 logger to a compatible METER digital sensor.
This feature can be used to troubleshoot the sensor by sending SDI-12 digital sensor communication commands. See respective sensor documentation for additional information on SDI-12 commands.
- **Test:** Evaluates the ZL6 logger wireless signal ([Section 2.2.2](#)).
- **Cellular Configure:** Displays the Communication Settings tab in the Manage Settings dialog ([Manage Settings Dialog](#)).
- **List Cellular Carriers:** Queries the cellular module in the ZL6 logger for a list of carriers it detects. This is useful when trying to troubleshoot cellular connection problems.

NOTE: The ZL6 may not be authorized to operate on any or all the carriers listed.

- **Device Information:** Displays the Device Information tab in the Manage Settings dialog ([Manage Settings Dialog](#)).
- **Device Location:** Displays the GPS Location tab in the Manage Settings dialog ([Manage Settings Dialog](#)).

- **Show Raw Data/Show Processed Data:** Toggle showing raw or processed data in the instantaneous measurements area of the main screen. Use the raw data display to help troubleshoot poor sensor measurements.

WINDOW MENU

The Window menu provides the Show Terminal option. This allows for direct entry of commands to the ZL6 and is mainly used for troubleshooting.

HELP MENU

The Help menu has five options.

- **Check for Software Updates:** Checks for the newest available version of the ZENTRA Utility. If a newer version is available, a prompt will appear to install the update. The computer must be connected to the internet for this feature to work. ZENTRA Utility checks for newer versions of the program each time it launches. It will download these updates in the background automatically.
- **Check for Logger Firmware Updates:** Checks for the newest version of ZL6 firmware from METER. If a newer version is available, ZENTRA Utility downloads the firmware in the background.

When ZENTRA Utility connects to an ZL6, it compares the firmware on the logger with the latest version available. If the ZL6 firmware is out of date, ZENTRA Utility will prompt to start a firmware update for the logger. ZENTRA Utility maintains a cache of logger firmware to allow field firmware updates without a connection to the internet.
- **Update Sensor Firmware:** Some METER sensors (e.g., ATMOS and TEROS sensors) allow for firmware updates via ZENTRA Utility. Please consult the sensor user manual for more details.
- **Send Feedback to METER:** Sends product feedback, bug reports, or feature requests to METER when connected to the internet ([Figure 30](#)).

Figure 30 Send Feedback to METER Group window

Enter name, company name, and contact information in the form.

Identify the type of feedback being sent (general feedback, feature suggestions, bug report, or other).

Indicate if and how METER should respond (email or telephone).

Give details in the description area. If reporting a bug, detail what steps occurred prior to the bug and any error message. By default, bug reports include software error files. Other files can also be sent using this form (e.g., logger download files).

- **About ZENTRA Utility:** View the version of ZENTRA Utility currently installed.

MANAGE SETTINGS DIALOG

Changing the ZL6 configuration happens in the Manage Settings dialog, which has four tabs. Use the following steps to access the Manage Settings dialog:

1. Click **Settings** on the Button toolbar ([Section 5.2.1](#)).
2. Make edits to the settings on the tabs. Refer to the details about the types of control settings in the following sections.
3. Click **OK** to save settings.
Click **Cancel** to exit without applying settings.

DEVICE INFORMATION TAB

Use the Device Information tab to edit the information that appears in the Data Logger Identification area ([Figure 31](#)).

- **Device Name:** Logger-specific name to identify the logger in the software. The default name is the unit serial number. It can be changed to a name representing the field or plot where the logger is installed or the types of sensors installed.
- **Site Name:** Area-specific name to identify where a group of loggers are located in the software. The Site Name is optional.
- **Serial Number:** Factory-set logger serial number that cannot be changed.
- **Time Zone:** Time zone automatically set from ZENTRA Utility software or the cellular system.
- **Firmware Version:** Version of firmware on the ZL6. Check for the latest version of logger firmware, using the Help menu ([Section 5.2.5](#)).
- **Device Type:** Model of the ZENTRA logger connected to ZENTRA Utility (not editable).

The screenshot shows a 'Manage Settings' dialog box with a title bar containing a question mark and a close button. The 'Device Information' tab is selected, showing fields for Device Name (z-logger*), Site Name, Serial Number (EMCBasic), Firmware Version (2.06.0), and Device Type (ZL6 Basic). There is an unchecked checkbox for 'Automatically Upload to ZENTRA Cloud'. At the bottom are 'OK' and 'Cancel' buttons. The status bar at the very bottom says 'Ready'.

Figure 31 Manage Settings Device Information tab

SENSOR CONFIGURATION TAB

Use the Sensor Configuration tab to set the sensor measurement interval and to select sensors for each port ([Figure 32](#)).

- **Measurement Interval:** Controls how often the ZL6 stores sensor data ([Section 3.2.2](#)). The ZL6 Basic has only two options: 60 min and Off (not logging).

NOTE: Setting the measurement interval to Off (not logging) turns off sensor measurement, data storage, and data uploads.

- **Data Storage:** Shows the percentage of logger storage currently used and an approximation of when the logger will begin overwriting the oldest data. This calculation is based on the data already stored, measurement interval, and existing sensor types configured in each port of the logger.
- **Sensor port tabs:** Displays sensor type and firmware version (when applicable) for each sensor port on the logger. Select the correct sensor type from the dropdown menu to ensure correct sensor measurements.

NOTE: Only digital sensors have firmware versions.

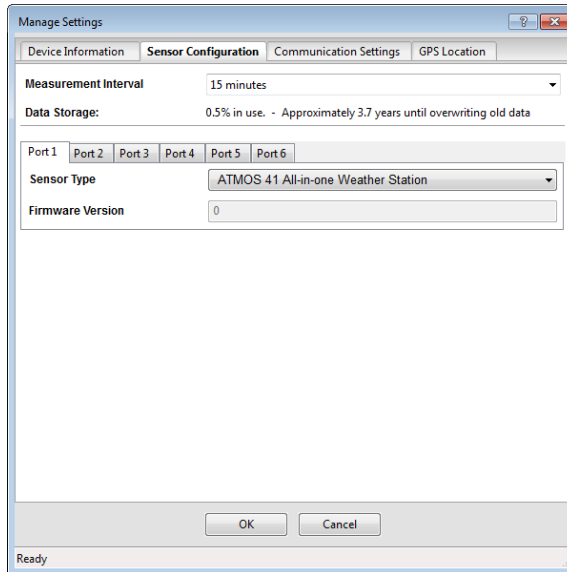


Figure 32 Manage Settings Sensor Configuration tab

COMMUNICATION SETTINGS TAB

Use the Communication Settings tab to control upload frequency and times for the ZL6 (Figure 33). This tab is unavailable for the ZL6 Basic.

- **Upload frequency for each selected hour:** Enable or disable automatic data uploads from the ZL6 to ZENTRA Cloud. The Upload Frequency describes how often data are uploaded and is a different setting than the sensor measurement interval. Data are sent once per hour. If more frequent uploads are needed, please contact [Customer Support](#). METER offers cellular service plans that support uploading data every 15 min.
- **Upload Times:** Choose the approximate times of day that data are uploaded from the logger to ZENTRA Cloud. The data will be uploaded at a random time during each selected hour to upload data. To account for this variation, choose times prior to when the data are needed. By default, the ZL6 is configured to upload data at optimal hours to conserve battery. To conserve battery power further, choose fewer upload times.

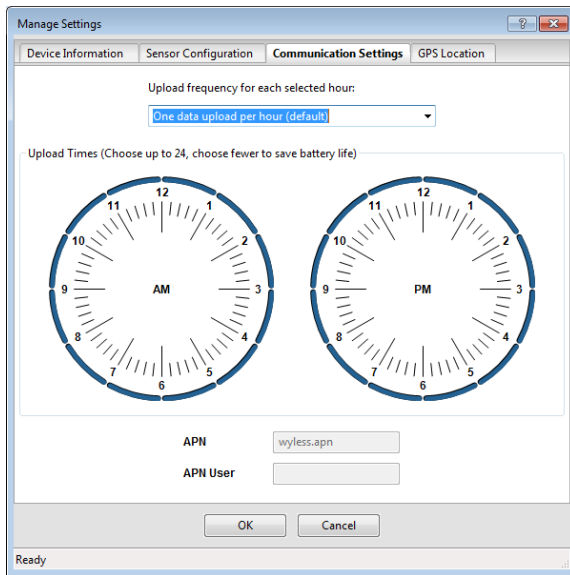


Figure 33 Manage Settings Communication Settings tab

GPS LOCATION TAB

The GPS location information in this tab is automatically provided by the GPS receiver built into the ZL6 and ZL6 Pro (Figure 34). The time zone is set by the computer or cellular network.

- **Latitude and Longitude:** Provides GPS location of the ZL6.
- **Altitude:** Contains altitude from sea level of the ZL6.
- **Time Zone:** Offset from UTC time zone of the ZL6.

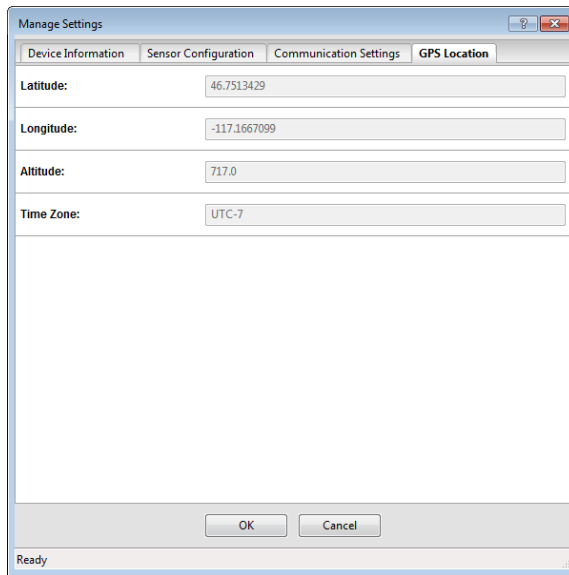


Figure 34 Manage Settings GPS Location tab

5.3 ZENTRA CLOUD

ZENTRA Cloud is a cloud-based web application to download, view, and share ZL6 data as well as change logger configurations. ZENTRA Cloud is also designed to make it easy to share data with colleagues. A trial of ZENTRA Cloud is included with each ZL6 purchase. This manual offers only instructions to logging in to ZENTRA Cloud. Use the online help files to learn more about all the features of ZENTRA Cloud.

The first step to using the ZL6 with ZENTRA Cloud is to create a customer site (a group of users and loggers).

1. Navigate to the server listed on the orange subscription card (zentracloud.com, zentracloud.cn, or zentracloud.eu) (Figure 35).

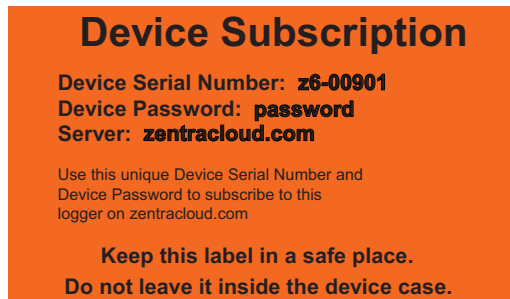


Figure 35 Sample device subscription card

2. Click the **Sign Up** button.
3. Enter the required information, including a valid email address.
4. Accept the terms and conditions.
5. Click **Sign Up**.

ZENTRA Cloud will send an email confirmation.

6. Click the link in the confirmation email inside email application.
7. Log in to ZENTRA Cloud.

To view data from ZL6 loggers on the customer site, subscribe to each desired ZL6 logger on ZENTRA Cloud following the steps below. A logger can only belong to one site at a time.

NOTE: Depending on the organization, labels may be Site and Plot. These designations can be changed at any time.

1. Select **New Site** on the ZENTRA Cloud home screen.
2. Give the Site a name.
A Site can contain one or more Plots.
3. Select **New Plot**.
4. Associate this Plot to the Site.
5. Give the Plot a name.
A Plot can contain one or more loggers.
6. Select **New Subscription**.
7. Choose the Site and Plot.
8. Fill in the ZL6 Device Serial Number and Device Password as shown on the device subscription card ([Figure 35](#)).

Once subscribed to a ZL6, the logger should appear on the map and sensor data can be viewed and downloaded. Logger settings can be changed using ZENTRA Cloud. ZENTRA Cloud also provides a convenient way to share data from ZL6 loggers with colleagues, with user-set permissions. See the online help files for more information.

6. SERVICE

This section describes the maintenance of the ZL6. Troubleshooting solutions and customer service information are also provided.

6.1 MAINTENANCE

The ZL6 may be returned to METER for maintenance (system inspection or replace old or damaged parts). Select replacement parts (e.g., USB cable, antenna, cable strain relief parts, or gaskets) can also be ordered from METER. Contact [Customer Support](#) for more information. ZENTRA Utility makes it easy to send feedback, bug reports, and feature requests to METER ([Section 5.2.5](#)).

The ZL6 requires little maintenance when installed correctly. Be sure to check the ZL6 logger periodically:

- Replace batteries as needed.

NOTE: Do not mix different batteries types together. Do not mix new and old batteries together.

- Inspect the battery holders to ensure they are clean and free of corrosion.
- Verify that the sensor ports are clean and that the sensors are making good contact with the ports.
- Clean the inside of the sensor ports with isopropyl alcohol and a swab if soil or other foreign materials are visible.
- Check case gaskets and strain relief hooks. Replace gaskets every 1 to 2 years, as needed.
- Replace zip ties securing the logger annually or as needed.

NOTE: Never immerse the ZL6 in liquids or bury the ZL6. This and other misuse, improper protection, or improper installation may damage the ZL6 and void the manufacturer's warranty.

NiMH batteries should last for several years if they are charging properly. Over a long period of time, NiMH batteries will begin to lose their charge capacity. If dark periods lasting months cause the batteries to discharge too low, it is time to replace the NiMH batteries. When replacing NiMH batteries, use high-quality batteries advertising higher charge capacity. New NiMH batteries may also be purchased from METER. Contact [Customer Support](#) to discuss concerns or recommendations.

Alkaline or Energizer® Ultimate Lithium™ batteries should be replaced when the battery charge nears 0%. Replace batteries with high-quality alkaline batteries. A low-quality battery may not provide the desired battery life for the ZL6 logger.

NOTE: Installing or replacing the batteries in the ZL6 resets the internal real-time clock. The ZL6 requires a time sync to accurately save a time and date stamp with each sensor measurement record. The ZL6 and ZL6 Pro time can be set from ZENTRA Utility, the on-board GPS receiver, or the cellular network. Press the [TEST](#) button after changing the batteries to enable the GPS receiver to acquire a new time and position fix. The ZL6 Basic receives a time sync when the logger connects to ZENTRA Utility or ZENTRA Utility Mobile.

6.2 TROUBLESHOOTING

Although the ZL6 is designed for durability and built to the highest manufacturing standards, problems may occasionally occur. This troubleshooting section details the major problems and their solutions. If the problem is not listed or these solutions do not solve the issue, contact [Customer Support](#).

Table 3 Troubleshooting the ZL6

Problem	Possible Solutions
ZENTRA Utility cannot connect to the device or ZL6 logger not showing in the COM port picker	If using a Windows computer, reinstall the USB driver from https://meter.ly/ZL6-support. Mac computers running ZENTRA Utility do not require a custom USB driver. Check that the USB cable is securely plugged into the logger and the computer. Ensure the logger has good batteries. Press the TEST button on the logger to reset it. Connect to a second logger. If the connection works, the problem is likely with the first logger. Try a different micro-USB cable. Ensure the cable is not intended for charging only.
ZENTRA Utility reports it lost the connection	Check or replace the USB cable. Increase the number of times ZENTRA Utility tries sending commands to the logger: • Go to the Manage Preferences menu. • Select the Communication tab. • Increase the Direct Connect Retries.
ZENTRA Utility states there is no new data for downloading or Logger stopped making measurements	Wait for at least the length of the measurement interval to ensure the logger had enough time to record data. Ensure the logger is configured to measure data, i.e., make sure the measurement interval is not set to Off (not logging). Check the battery. The ZL6 will stop making sensor measurements when the batteries are extremely low. Press the TEST button to reset the logger.
Sensor measurement data does not seem to be correct	Switch the sensor to a known working port and scan again. If the problem follows the sensor, then the sensor may be damaged. Many issues affect the quality of the sensor measurement. Please see the sensor user manual for troubleshooting.

Table 3 Troubleshooting the ZL6 (continued)

Problem	Possible Solutions
Sensor data shows No response from sensor in the Scan window or Downloaded data shows #N/A	The raw data measured by the logger is out of expected range for the sensor. This could be caused by an unplugged or broken sensor. Ensure the sensor stereo plug is fully inserted into the logger sensor port. Ensure the sensor type shown in the Scan window matches the sensor connected to the logger. Switch the sensor to a known working port and scan again. If the sensor shows data, the port may be damaged. If the No response from sensor message is still presenting, the sensor could be unplugged or broken. If the problem persists, contact Customer Support.
Red ERROR light and/or green OK light are always on	Check logger batteries. Press the TEST button to reset the ZL6. If the problem persists, contact Customer Support.
Red ERROR light is on after pressing the TEST button	See Section 3.2.3 for information on the TEST button results and how to further troubleshoot.
Cellular uploads stopped working	Press the TEST button to reset the ZL6. Run the Cellular Communication Test in ZENTRA Utility to determine if there is a communication error. Check the List Cellular Carriers function in ZENTRA Utility to confirm there are cellular carriers operating in the area. To access navigate to "..." for More. Next select Device Tools and from that menu select List Cellular Carriers. If the problem persists, contact Customer Support.
Logger does not seem to be working correctly or reliably	Press the TEST button on the logger to reset the ZL6. Check logger batteries. Replace non-rechargeable batteries if close to 0%. Recharge NiMH batteries if close to 0%. Check for corrosion or water damage. Check that the seals and gaskets are intact. If the problem persists, contact Customer Support.
Water is found inside the logger	Precipitation can be trapped between the solar panel cover and the top of the door in windy conditions and drip into the logger. Wipe off the logger interior and the top of the door. If this problem recurs frequently, consider enclosing the logger in a waterproof case.

Table 3 Troubleshooting the ZL6 (continued)

ZL6 Wi-Fi Network Connections	
Problem	Possible Solutions
ZENTRA Utility Mobile is not listing a desired Wi-Fi network even though the Wi-Fi network is showing on device running ZENTRA Utility Mobile	The Wi-Fi hardware in the ZL6 is compatible with Wi-Fi networks using the 2.4 GHz bands. ZL6 doesn't work with networks using 5 GHz bands.
	The Wi-Fi radio connection between the ZL6 and the access point may be too weak.
	The ZL6 is only able to report information for up to 12 Wi-Fi networks during a scan. Try refreshing the scan. Alternatively use the process for connecting to a hidden network (Section 4.5) to configure the ZL6 to your network.
The Wi-Fi network at a university/government agency does not seem to be working with the ZL6	The access point is using Wi-Fi channel 12 or 13 in a location where the Wi-Fi hardware determines these channels are unavailable. Change the access point to use a channel number in the range 1 to 11.
	Wi-Fi networks using enterprise security can offer additional challenges for devices like the ZL6. Consider asking your IT professional to deploy a Wi-Fi access point for the ZL6 that uses a compatible form of network security. Contact customer support or METER sales partner to discuss alternative ways for your ZL6 to upload data to ZENTRA Cloud.
ZL6 uploads to ZENTRA Cloud appears to have stopped working.	Try rebooting the Wi-Fi access point/router. ZL6 caches all unsent data to send when the connection is restored.
	Use the upload test (Section 4.7) to evaluate the connection to the Wi-Fi Access Point and ZENTRA Cloud. Use ZENTRA Utility Mobile to re-configure the ZL6 for your network. This step is necessary if the name of your Wi-Fi network changed or if the network passphrase changed.
ZL6 won't communicate directly with user over Wi-Fi	The ZL6 is not available on the Wi-Fi network for interactive communications. The ZL6 only powers the Wi-Fi module long enough to send sensor measurement data and status updates to ZENTRA Cloud after each measurement interval.

6.3 CUSTOMER SUPPORT

NORTH AMERICA

Customer service representatives are available for questions, problems, or feedback Monday through Friday, 8:00 am to 5:00 pm Pacific time.

Email: support.environment@metergroup.com
sales.environment@metergroup.com

Phone: +1.509.332.5600

Fax: +1.509.332.5158

Website: metergroup.com

EUROPE

Customer service representatives are available for questions, problems, or feedback Monday through Friday, 8:00 to 17:00 Central European time.

Email: support.europe@metergroup.com
sales.europe@metergroup.com

Phone: +49 89 12 66 52 47

Fax: +49 89 12 66 52 20

Website: metergroup.com

If contacting METER by email, please include the following information:

Name	Email address
Address	Instrument serial number
Phone	Description of the problem

NOTE: For products purchased through a distributor, please contact the distributor directly for assistance.

6.4 TERMS AND CONDITIONS

By using METER instruments and documentation, you agree to abide by the METER Group, Inc. Terms and Conditions. Please refer to metergroup.com/terms-conditions for details.

APPENDIX A. COMPLIANCE CERTIFICATIONS

This appendix contains compliance statements that apply to the ZL6.

A.1 USA

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

The ZL6 series loggers contain one or more of the following radio modules, listed by their FCC identification numbers:

SH6MDBT40	All ZL6 series (Bluetooth module)
XPYLISAU201 or XPYLISAU200	ZL6 with 3G UMTS cellular module
XPY2AGQN4NNN	ZL6 with 4G LTE-M cellular module
XPYUBX21BE01	ZL6 with 4G LTE Cat 1 cellular module
XPYNINAW1	ZL6 with Wi-Fi module

Changes or modifications to the ZL6 series loggers or antenna not expressly approved by METER Group, Inc. could void FCC compliance and thus the user's authority to operate the equipment.

A.2 CANADA

Industry Canada (IC) Notices

This Class B digital apparatus complies with Canadian CAN ICES-3(B) / NMB-3(B) and RSS-210. Operation is subject to the following two conditions:

- This device may not cause interference
- This device must accept any interference, including interference that may cause undesired operation of the device

The ZL6 series loggers contain one or more of the following radio modules, listed by their IC identification numbers:

8017A-MDBT40	All ZL6 series (Bluetooth module)
8595A-LISAU201 or 8595A-LISAU200N	ZL6 with 3G UMTS cellular module
8595A-2AGQN4NNN	ZL6 with 4G LTE-M cellular module
8595A-UBX21BE01	ZL6 with 4G LTE Cat 1 cellular module
8595A-NINAW13	ZL6 with Wi-Fi module

Radio Frequency (RF) Exposure Information

This device has been evaluated and shown compliant with the IC RF Exposure limits under mobile exposure conditions (antennas are greater than 20cm from a person's body).

Avis d'Industrie Canada (IC)

Cet appareil numérique de classe B est conforme aux normes canadiennes CAN ICES-3(B) / NMB- 3(B) et RSS-210.

Son fonctionnement est soumis aux deux conditions suivantes:

- Cet appareil ne doit pas causer d'interférence
- Cet appareil doit accepter toute interférence, notamment les interférences qui peuvent affecter son fonctionnement

Informations concernant l'exposition aux fréquences radio (RF)

Ce périphérique a été évalué et démontré conforme aux limites d'exposition aux fréquences radio (RF) d'IC lorsqu'il est installé dans des produits hôtes particuliers qui fonctionnent dans des conditions d'exposition à des appareils mobiles (les antennes se situent à plus de 20 centimètres du corps d'une personne).

Changes or modifications to the ZL6 series loggers not expressly approved by METER Group, Inc. could void Industry Canada (IC) compliance and thus the user's authority to operate the equipment.

A.3 EUROPEAN UNION

R&TTED and European Conformance CE mark

Radiofrequency radiation exposure Information: this equipment complies with radiation exposure limits prescribed for an uncontrolled environment for fixed and mobile use conditions. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and the body of the user or nearby persons. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter except as authorized in the certification of the product.

A full CE declaration of conformity for the ZL6 is available on request from METER Group.

A.4 JAPAN

TELEC (Japan)



The ZL6 series loggers contain one or more of the following radio modules that are TELEC/JATE certified.

All ZL6 series (Bluetooth module)

- Technical Requirements certified type number: 201-160496

ZL6 with TELEC-approved 3G UMTS cellular module

- Technical Conditions certified type number: AD120274003
- Technical Requirements certified type number: 003-120375

ZL6 with 4G LTE-M cellular module

- Technical Conditions certified type numbers: D180083003
- Technical Requirements certified type number: 003-180155

ZL6 with 4G LTE Cat 1 cellular module

- Technical Conditions certified type numbers: D220006003
- Technical Requirements certified type number: 003-220017

ZL6 with Wi-Fi module

- Technical Requirements certified type number: 204-810001

INDEX

B

- battery
 - charging 1
 - diagram 21
 - installation 3, 23–24, 25
 - life 19, 37
 - operating temperature range by type 20
 - replacement 25, 49

C

- cellular communication 11
- cellular communication test 9, 15–16
- cellular module 25
- communication settings 45–46
- compliance
 - CE 55
 - IC 54
 - TELEC 56
- components
 - antenna 10
 - batteries 23–24
 - enclosure 20–21
 - GPS module 24
 - included 2
 - memory 25
 - reference barometer 1
 - status light 20, 23
 - TEST button 20, 22–23
- configuration 5–11
 - computer communication 4
 - sensor 7–11
 - using ZENTRA Utility 4, 5–11
 - using ZENTRA Utility Mobile 11–13

D

- data collection
 - metadata 11
 - sensor calibration 38
 - storage 19, 25, 45
 - timekeeping 25
- data deletion 11–16
- data download
 - using ZENTRA Cloud 48
 - using ZENTRA Utility 10, 37, 38
- data loggers 1

E

- email address 53

F

- fax number 53
- firmware 37, 42, 44

G

- GPS
 - display 41, 46
 - receiver 24

I

- installation 3–4
 - preparation 3
 - sensors 5
 - software 3
 - solar panel optimization 4
 - tools needed 3

M

- maintenance 49
- measurement interval 1, 22, 37

P

phone number 53

R

Raw VWC 38

S

scan 10, 16

sensor measurements 10, 16

specifications

communications 18–19

measurement 17

physical 19–20

support 42–43, 53

T

terms and conditions 53

troubleshooting 50–51

cellular communication test 9

sensor error codes 21

status lights 23

TEST button 22–23

Wi-Fi network 52

W

Wi-Fi communication

network configuration 27–32

problem. *See* troubleshooting

wireless data transmission

cellular communication 25

communication settings 45–46

supported networks 41

Z

ZENTRA Cloud 1, 11, 47–48

ZENTRA Utility

Actions menu 41–42

active sensors 37

button toolbar 36

Data menu 38

Edit menu 38–40

File menu 38

Help menu 42–43

main screen 36

scan 36

settings 43–47

Window menu 42

ZENTRA Utility Mobile

configuration 4, 13–15

installation 11–12

METER Group, Inc.

2365 NE Hopkins Court Pullman, WA 99163
T: +1.509.332.2756 F: +1.509.332.5158
E: info@metergroup.com W: metergroup.com

METER Group GmbH

Mettlacher Straße 8, 81379 München
T: +49 89 1266520 F: +49 89 12665220
E: info.europe@metergroup.com W: metergroup.com

